



# **Table of Contents**

Getting Started 4	Change System Settings 22
Your Rider 420 4	Bluetooth 25
Accessories5	Cofigure Auto Scroll26
Status Icons 5	Enable File Saving Mode 26
Step 1: Charge Your Rider 420 6	Start Reminder27
Step 2: Turn On Rider 420 6	View Memory Usage27
Step 3: Initial Setup 6	Reset Data28
Step 4: Acquire Satellite	View Firmware Version 28
Signals 7	ANT+ / BLE Sensors 29
Step 5: Ride Your Bike with	Altitude 31
Rider 420 7	Personalize User Profile 32
Reboot Rider 420 7	Personalize Bike Profile 33
Share Your Records8	<b>Bryton Active App</b>
Auto Sync Tracks to	Advanced Settings35
Bryton Active App 9	
Bryton Update Tool10	Grid Setting35
View History 11	Altitude Calibration 36
•	Notifications 37
View Exercise/Training Record 11	Appendix38
Delete History11	Specifications38
History Flow12	Battery Information 39
Follow Track 13	Install Rider 420 41
Create Track 13	Install Speed/Cadence/
Add POI 14	Dual Sensor (Optional)42
View/Delete Track 15	Install Heart Rate Belt
Settings 16	(Optional)43
Data Page16	Wheel Size and
Smart Lap 18	Circumference 44
Set Alert19	Basic Care For
Smart Pause 19	Your Rider 420 45
Data Record20	Data Fields 46
GPS System21	



Always consult your physician before you begin any training. Please read the details in Warranty and Safety Information guide in the package.

## **Australian Consumer Law**

Our goods come with guarantees that can not be excluded under the New Zealand and Australian Consumer Laws. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

## Video Tutorial

For a step-by-step demonstration of device and Bryton Active App, please scan QR code below to check Bryton Video Tutorials.




https://www.youtube.com/brytonactive


# **Getting Started**

This section will guide you through the basic preparations before you start using your Rider 420. Rider 420 is equipped with barometer which shows the real time altitude.

NOTE: To adjust the altitude settings on Rider 420, refer to page 31

### **Your Rider 420**

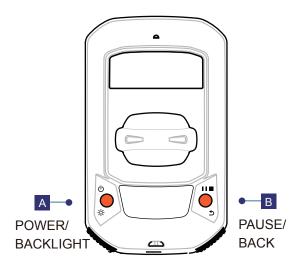

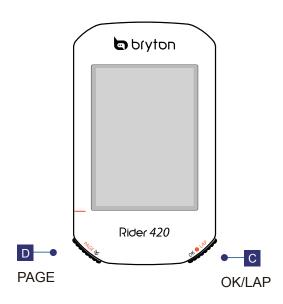

### A Power/Backlight ( 小菜 )

- Press to turn the device on.
- Press to turn on/off the backlight while the device is on.
- Long press to turn the device off.

## B BACK ( 🗢 💵 )

- In Cycling mode, press to enter Menu page.
- In Menu, press to return to the previous page or cancel an operation.
- When recording, press to pause recording and enter the Menu.

#### C OK/LAP (OK LAP)

- In Menu, press to enter submenu or confirm a selection.
- In Cycling mode, press to start recording. When recording, press to mark the lap.

#### 

- In Cycling mode, press to switch meter screen pages.
- In Menu, press to scroll through the menu options.
- In Cycling mode, long press to enter into Shortcut Menu.

## **Accessories**

The Rider 420 comes with the following accessories:

USB cable

• Bike mount

#### Optional items:

Smart Heart Rate Sensor

Smart Cadence Sensor

Race Mount

Smart Speed Sensor

• Smart Speed / Cadence Dual Sensor

Sport Mount

## **Status Icons**

lcon	Description	
Bike Type		
00	Bike 1	
	Bike 2	
GPS Signal Status		
× •	No signal (not fixed)	
•	Weak signal	
<b>?</b>	Strong signal	
Power Status		
	Full battery	
	Half battery	
	Low battery	


lcon	Description
•	Heart Rate Sensor is active
9	Cadence Sensor is active
M	Speed Sensor is active
(O)	Dual Sensor is active
watt	Power Meter is active
<b>❸</b>	Log Record in progress
II	Recording is paused
<b>A</b> / <b>V</b>	Current speed is faster/slower than average speed.

**NOTE:** Only the active icons are displayed on the screen.

## **Step 1: Charge your Rider 420**

Connect Rider 420 to a PC to charge the battery for at least 4 hours. Unplug the device when it is fully charged.

- You may see a white screen when the battery is really low. Keep the device plugged for several minutes, it will automatically turn-on after battery is properly charged.
- The temperature suitable for charging battery is  $0^{\circ}$ C ~  $40^{\circ}$ C. Beyond this temperature range, charging will be terminated and the device will draw power from battery.

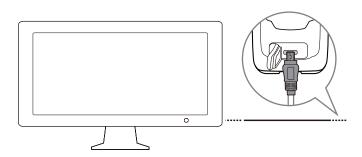

## **Step 2: Turn On Rider 420**

Press () to turn on the device.

## **Step 3: Initial Setup**

When turning Rider 420 on for the first time, you will need to follow on screen instructions to complete setup.

- 1. Select the display language.
- 2. Select the unit of measurement.


**NOTE:** Only when you choose English for the display language, you will need to select the unit of measurement. Otherwise, default would be metric unit.

## **Step 4: Acquire Satellite Signals**

Once the Rider 420 is turned on, it will automatically search for satellite signals. It may take 30 to 60 seconds to acquire signals. Please make sure you acquire the satellite signal for the first time use.

The GPS signal icon  $(\widehat{\boldsymbol{\gamma}}/\widehat{\boldsymbol{\gamma}})$  appears when GPS is fixed.

- If the GPS signal is not fixed, an icon appears on the screen.
- Please avoid the obstructed environments since they might affect the GPS reception.

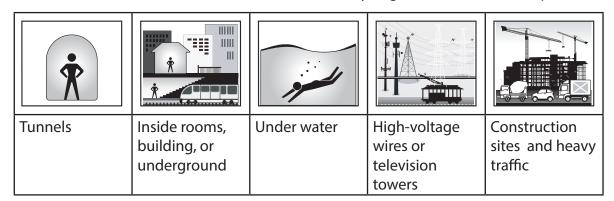

**NOTE:** To improve the GPS accuracy, you can set 1 sec mode as your recording frequency ( page 20 ) and update GPS regularly by using Bryton Update Tool ( page 10 ) to update GPS data.

## **Step 5: Ride Your Bike with Rider 420**

• Free ride:

In meter view, measurement starts and stops automatically in sync with the movement of the bicycle.

• Start an exercise and record your data:

In meter view, press or •LAP to start recording, press to pause recording and enter the Menu. Then, choose to save your workout data.

**NOTE:** If you continue to proceed without pressing ox •LAP to record, Rider 420 would pop up a reminder to ask you to record when motion of bike is detected. To set the frequency of start reminder, please go to page 27.

### **Reboot Rider 420**

To reboot the Rider 420, press two keys ( () / > 11 ) at the same time.

## **Share Your Records**

### **Upload Your Tracks to Brytonactive.com**

#### 1. Sign up/log in Brytonactive.com

- a. Go to https://active.brytonsport.com.
- b. Register a new account or use your current account to log in.

#### 2. Connect to PC

Turn on your Rider 420 and connect it to your computer by USB cable.

#### 3. Share Your Records

- a. Click "+" on the upper right corner.
- b. Drop FIT,BDX,GPX file(s) here or Click "Select files" to upload tracks.
- c. Click "Activities" to check uploaded tracks.

#### Share Your Tracks to Strava.com

#### 1. Sign up/log in on Strava.com

- a. Go to https://www.strava.com
- b. Register a new account or use your current Strava account to log in.

#### 2. Connect to PC

Turn on your Rider 420 and connect it to your computer by USB cable.

#### 3. Share Your Records

- a. Click "+" on the top right corner of Strava page and then click "File".
- b. Click "Select Files" and select FIT files from Bryton device.
- c. Enter information about your activities and then click "Save & View".

## **Auto Sync Tracks to Bryton Active App**

No more uploading tracks manually after riding. Bryton Active App automatically syncs your track after pairing with your GPS device.

a. Scan QR code below to download Bryton Active App or go to Google Play/App Store to search Bryton Active App. Then, log in or create an account.






b. Go to Settings>Device Manager>+> Rider 420 to add your GPS device.





c. Check if UUID shown on app is the same as your device. Add "Yes" to confirm adding. If it is wrong UUID, press NO to add it again.

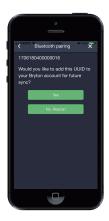



Note: Each device has its own unique UUID. You can find it on the back of the device.

d. Successfully added! Turn on Auto Now, new tracks will be automatically uploaded to Bryton Active App.



**NOTE:** Bryton Active App syncs with Brytonactive.com. If you already have brytonactive.com account, please use the same account to log in to Bryton Active App and vice versa.

## **Bryton Update Tool**

Bryton Update Tool is the tool for you to update GPS data, firmware and download Bryton Test.

- 1. Go to http://www.brytonsport.com/#/supportResult?tag=BrytonTool and download Bryton Update Tool.
- 2. Follow the on-screen instructions to install Bryton Update Tool.

#### **Update GPS Data**

The newer GPS data can speed up the GPS acquisition. We higly recommend you to update GPS data for every 1-2 weeks.

## **Update Firmware**


Bryton releases a new firmware version on irregular basis to add new functions or correct bugs for better and more stable performance. It is recommended that you update firmware once new firmware available. Firmware updates usually take longer to download and install. Do not remove USB cable during firmware updating.

# **View History**

You can veiw exercise record on your device right after your ride, and delete any unwanted record to gain more storage.

## **View Exercise/Training Record**

Rider 420 provides graphical track summary, detail workout data, lap data and graphical analysis for you to have a better idea of your workout performance.

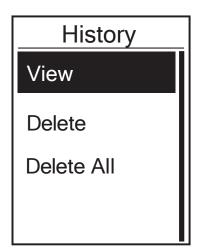


To view your history:

- 1. In the main screen, press PAGE 

  to select View History and press ok LAP to enter.
- 2. Press ok LAP to enter **View**.

**NOTE:** You can also upload your history to brytonactive.com or Bryton Active App to keep track of all your ride data.

## **Delete History**

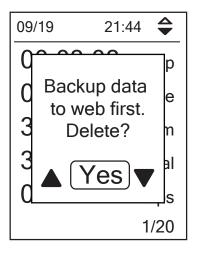

To delete your history:


- 1. In the main screen, press PAGE 

  to select View History and press ok 

  LAP to enter.
- 2. Press PAGE 

  to select **Delete** and press ok LAP to enter.
- 4. A"Backup data to web first. Delete?" message appears on the screen. To delete the data, press ▲ / ▼ to select **Yes** and press ok LAP to confirm.

# **History Flow**

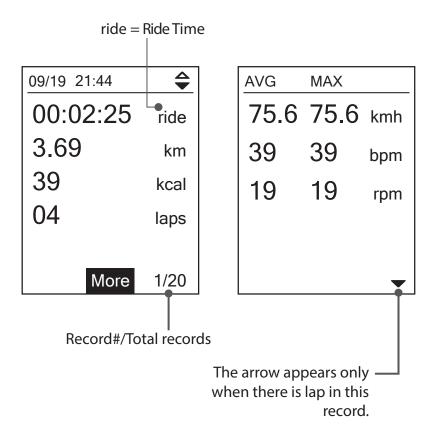

Lap 01	00:49
0.25	km
81.4	kmh
13	kcal
0	bpm
0	rpm

## **Follow Track**

Rider 420 provides 3 ways for you to create tracks: 1. Plan trips via Bryton Active App. 2. Import trails (.GPX) from 3rd-party platforms. 3. Auto sync trails from Strava, Komoot and RideWithGPS. With turn by turn guidance, the device offers info for distance and direction before every turn.

**Note:** Turn by turn gudiance function only supports trips planned by Bryton Active App and trips imported to Bryton Active App.

### **Create Track**

### **Plan Trips via Bryton Active App**



- On Bryton Active App, tap Plan Trip to enter.
   To plan trip, simply put Start point on desired locations by tapping on the map or tap in the slide menu.
- 2. Choose desired mode for the app to suggest appropriate trails for you.
- 3. Put Way points and End point to complete planning the trip.
- 4. Tap "and edit the name of your trips.
- 5. Tap **Upload** to upload planned trips to server.
- 6. Tap < to be back to Course menu. Enter your planned trip and tap 5 to download the planned trips to the device.
- 7. In the device Main Menu, select **Follow Track> View**Find the planed route and press ok LAP to start following the track.


### Import Trails (.GPX) from 3rd-Party Platforms



- 1. Go to 3rd-Party websites/platforms.
- 2. Select the route you would like to download.
- 3. Select .GPX file and download.
- Click "Open in Active" (For IOS phone).
   Open files with Bryton Active App (For Android phone).
- 5. Name your route and click "OK".
- 6. Go to "My Routes".
- 7. You can see the route that your imported to Bryton Active App.
- 8. Click the route to see more details.
- 9. Click right upper corner icon to download the route to your Bryton device.
- 10. In the device Main Menu, select Follow Track> View
  Find the planed route and press oκ LAP to start following the track.

Note: To view step by step tutorial video, please click **Bryton Active** | 3rd Party Routes Support - Import .gpx file to Bryton Active

## **Auto Sync Trails from Strava/Komoot/RideWithGPS**

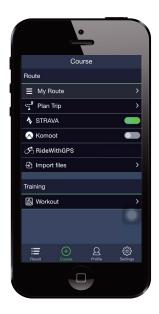

- 1. Go to Strava/Komoot/RideWithGPS to create a route.
- 2. Start to plan your route.
- 3. Click Save and enter the route name.
- 4. Go to **Course** in Bryton Active App.
- 5. Enable STRAVA/Komoot/RideWithGPS to set up a link.
- 6. Go to My Routes and select the route.
- 7. Click right upper corner icon **5** to download the route to your Bryton device.
- 8. In the device Main Menu, select Follow Track> View
  Find the planed route and press oκ LAP to start following the track.

### **Add POI**

Before adding POI, please ensure that you have already imported a route or planned a trip and that it appears in Bryton Active App "My Route".




- 1. Go to **Course**> **My Routes** in Bryton Active App.
- 2. Select the route you would like to add POIs.
- 3. Tap to expand POI menu.
- 4. Tap (+Add POI) and choose POI type.
- 5. Slide the icon on the bar below to place the POI anywhere along your route.
- 6. Tap Save POI to confirm and save POI placement.
- 7. Click the icon in the upper right corner to download the route to your Bryton device.
- 8. In the device Main Menu, select Follow Track> View
  Find the planed route and press OK LAP to start following the track.

**Note:** To view on-device POI info, please add the related POI data fields to the device data pages [from the Follow Track category]. It is also recommended to place these data fields in larger grid areas to see more complete information.

To know more about how to add POI data fields to the device data pages, please refer to page 16, 35.

## **View/Delete Track**

You can veiw and delete your tracks.

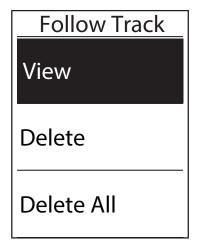



#### **View Tracks:**

#### **Delete Your Tracks:**


- In the Main Menu, press PAGE 

  to select Follow

  Track > Delete and press ok LAP.
- 2. Press PAGE ≯to choose the track and press ok LAP.
- 3. A message "Do you want to delete?" pops up. Press PAGE ≫to select Yes and press OK LAP. to confirm selection.

# **Settings**

In Settings, you can customize Exercises settings, GPS system, General settings, Sensor settings, Altitude, Bike and User profile. You can also customize most used device settings via Bryton Active App.

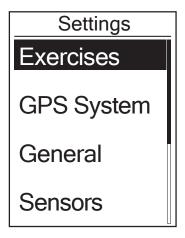


- 1. In the main screen, press PAGE >> to select **Settings.**
- 2. Press ok LAP to enter the Settings menu.


## **Data Page**

You can set the display settings for the Meter and Lap or you can customize data page via Bryton Active App. Please refer to page 35 to learn how to do it.

### **Meter Display**

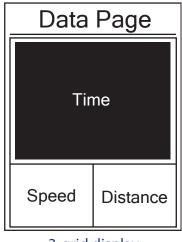



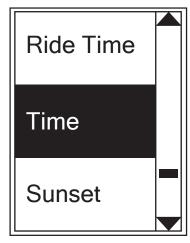

Item selection

- 1. In the Settings menu, press ok LAP to enter **Exercises** and press ok LAP again to enter **Data Page**.
- 2. Press OK LAP to enter **Data Page** and change **Auto** to **Manual** and press OK LAP to confirm selection.
- 3. Press PAGE 

  ★ to select **Data Page** and press ok 

  LAP to enter.
- 5. Press PAGE ♦ to select the number of **Data Fields** you need and press ok LAP to confirm.
- 6. Press PAGE ≥ to select the data you would like to make change and press ok LAP to confirm.
- 7. Press PAGE 

  to select the desired Category and press ok 

  LAP to confirm.
- 8. Press PAGE ≯to select the desired data and press ok LAP to confirm.
- 9. Press to exit this menu.

**NOTE:** The number of data fields shown on the screen depends on the "Data fields" selection.




2-grid display




3-grid display

**NOTE:** If Data Page is set to **Auto**, Rider 420 will automatically adjust its data field display when detecting the paired sensors.



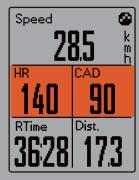

## **Lap Display**

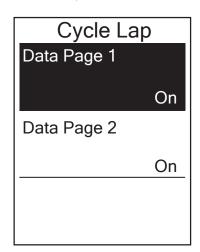


- 1. In the Settings menu, press ok LAP to enter Exercises > Data Page.
- 2. Press  $\nabla$  and then  $OK \bullet LAP$  to enter **Lap**.
- 3. Press OK LAPto enter **Data Fields**.
- 4. Press ▲ / ▼ to select the number of **Data Fields**. and press ok LAP to confirm selection.
- 5. Press ▲ / ▼ to select the data you would like to make change and press ok LAP to confirm.
- 6. Press ▲ / ▼ to select the desired **Category** and press ok LAPto confirm.
- 7. Press ▲ / ▼ to select the desired data and press ok LAP to confirm.
- 8. Press 511 to exit this menu.

## **Smart Lap**

With Smart Lap feature, you can use your device to automatically mark the lap at a specific location or after you have traveled a specific distance.


### **Lap by Location**

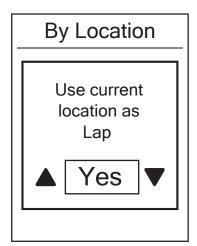

- 1. In the Settings menu, press ok LAP to enter **Exercises**. Press **⇒III** and then ok LAP to select **Samrt Lap**.
- 2. Press ok LAP to enter editing menu. Press ▲ / ▼ to select **Location** and press ok LAP to confirm.
- 3. A "Use current location as Lap" message pops up on the screen. Press oκ LAP to confirm this setting.
- 4. Press **SIII** to exit this menu.

**NOTE:** If the GPS signal is not fixed, a "No GPS Signal. Searching GPS, please wait" message appears on the screen. Check if GPS is on and make sure you step outside to acquire signal.

## **Lap by Distance**

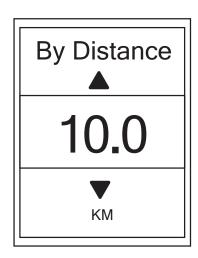


- 1. In the Settings menu, press ok LAP to enter **Exercises**. Press ⇒ II■ and then ok LAP to select **Samrt Lap**.
- 2. Press OK LAP to enter editing menu. Press PAGE ❤ to select **Distance** and press OK LAP to confirm.
- 4. Press **SIII** to exit this menu.

### **Set Alert**

With the Alert feature, the device displays a message to notify you if:

- your heart rate exceeds or drops below a specific number of beats per minute (bpm).
- you exceed or drop below a custom speed setting during your ride.
- your cadence speed exceeds or drops below a specific number of revolutions of the crank arm per minute (rpm).
- you reach a certain amount of distance for the long workouts.
- you reach a certain amount of time for the long workouts.

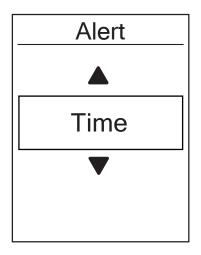


- 1. In the Settings menu, press ok LAP to enter **Exercises**.

  Press PAGE ➤ and then ok LAP to select **Alert**.
- 2. Press ok LAP to enter editing menu. Press PAGE ❤ to select **Time**, **Distance**, **Speed**, **HR** or **Cadence** and press ok LAP to configure the necessary settings.
- 3. Press PAGE ♦ to select your desired setting and press ok LAP to confirm.
- 4. Press sile to exit this menu.

### **Smart Pause**

When you have a lot of obstacles along your route such as traffic lights, crosswalk, etc., this can really impact your recorded data. When the function is activated, the time and distance will automatically pause once you stop moving and resume once you start riding to enhance your data efficiency.

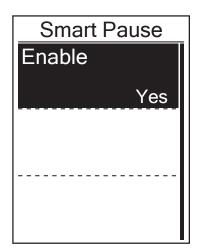

- 1. In the Settings menu, press ok LAP to enter **Exercises**.


  Press PAGE ❤ and then ok LAP to select **Smart Pause**.
- 2. Press ok LAP to enter submenu and press PAGE 

  to select Yes and press ok LAP to confirm.
- 3. Press **⇒**□■ to exit this menu.

### **Data Record**

With Data Record function, you can set your odometer and activate 1 second mode to get more accurate data.

#### **Set ODO**

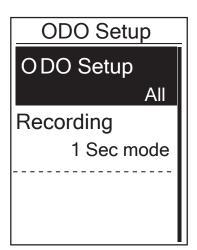


- In the Settings menu, press ok LAP to enter Exercises.
   Press PAGE ➤ and then press ok LAP to select Data Record.
- 2. Press ok ●LAP to enter **ODO Setup** and press ▼ /▲ to select desired setting and press ok ●LAP to confirm.
- 3. Press 511 to exit this menu.

**NOTE:** All means the odometer would show the cumulative distance of all trips; **Recorded** would only show the cumulative distance of recorded trips.

**NOTE:** If you would like to reset ODO, please refer to page 34: Reset ODO.

#### **Enable 1sec Mode**

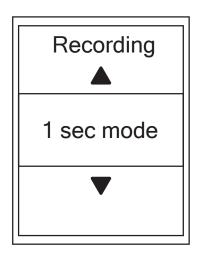

- 1. In the Settings menu, press OK LAP to enter **Exercises**.


  Press PAGE ❤ and then press OK LAP to select **Data Record**.
- 2. Presspage ≯and then press ok ●LAP to enter **Recording**.
- 4. Press **⇒** □ to exit this menu.


## **GPS System**


Rider 420 has full GNSS (Global Navigation Satellite System) support including GPS, GLONASS (Russia), BDS (China), QZSS (Japan) and Galileo (EU). You can select the suitable GPS Mode according to your location to enhance accuracy or suit your needs.


### **Choose Different Satellite Navigation System**


This setting allows you to switch between different satellite navigation systems to suit you best.

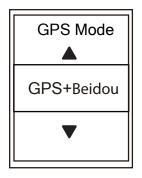

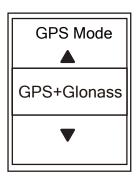

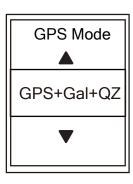

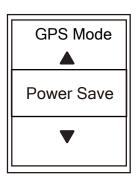

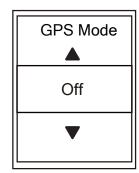

- 1. In the Settings menu, press PAGE ≥ and then press OK LAP to select **GPS System**.
- 2. Press OK LAP to enter GPS Mode.
- 3. In the GPS Mode menu, press PAGE 

  to select the desired GPS mode and press oκ ●LAP to confirm.
  - GPS+Beidou: GPS + BeiDou Navigation Satellite System.
     By April 2018, BeiDou is offering service in the Asia-Pacific region. Choose this combination if you're in this region for best accuracy.
  - GPS+Glonass: GPS + GLONASS Navigation Satellite System.
     Glonass is the second navigational system working with global coverage and of comparable precision. Choose this combination if you're in NON Asia-Pacific region for best accuracy.
  - GPS+Gal+QZ: GPS+Galileo+QZSS Navigation Satellite System.
     Consume less power than the two selection above, with sufficient accuracy for normal use.
  - Power Save: Trade-off accuracy to achieve maximum battery life. Use this mode in open sky.
  - Off: Turn-off GPS function. Choose this to save power when GPS signal is not available, or when GPS information is not required (such as indoor use).
- 4. Press **5** □ to exit this menu.


#### NOTE:

- Enabling either GLONASS or BDS also activates GPS, QZSS and Galileo satellite navigation system
- To view step by step tutorial video, please click **How To Change GPS System.**

## **Change System Settings**


You can customize the device system settings such as backlight off, key tone, sound, time/unit, on-screen display language.

### **Backlight Off**

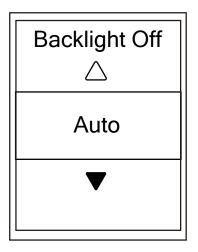


- 1. In the Settings menu, press ▼ and then press ok LAP to select **General**.
- 2. Press ok LAP to enter **System**.
- 3. Pressok LAPto enter Backlight Off.
- 5. Press **→ III** to exit this menu.

### **Key Tone**

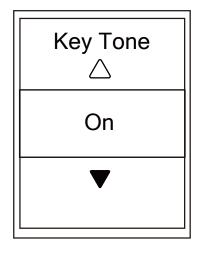


- 1. In the Settings menu, press ▼ and then press OK LAP to select **General**.
- 2. Press ok LAP to enter **System**.
- 4. Press PAGE **>** to select desired setting and press OK LAP to confirm.
- 5. Press **⇒**□■ to exit this menu.

#### Sound

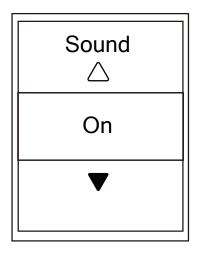


- 1. In the Settings menu, press PAGE ≯and then press OK LAP to select **General**.
- 2. Press ok LAPto enter **System**.
- 4. PressPAGE > to select desired setting and press OK LAP to confirm.
- 5. Press 5 11 to exit this menu.


#### Time/Unit

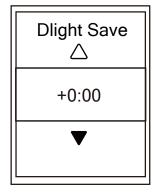


**Daylight Save** 

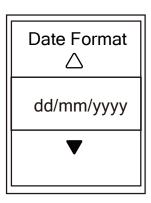


Date format

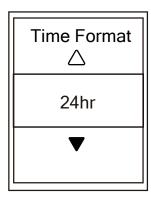

Time format

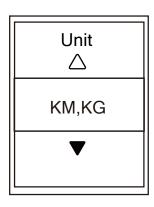

Unit

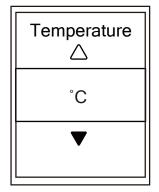


**Temperature** 

- 1. In the Settings menu, press PAGE ≼ and then press ok LAP to select **General**.
- 2. Press ok LAP to enter **System**.
- 3. Press PAGE 

  to select Time/Unit and press OK LAP to confirm.
- 5. Press PAGE ≯to select the desired setting/format and press ok LAP to confirm.
- 6. Press **□**II to exit this menu.

#### **Contrast**

You can adjust contrast on your device.

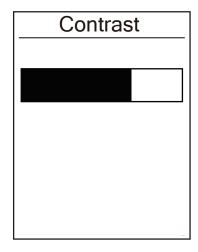

- 2. Press ok LAPto enter **System**.
- 3. Press PAGE 

  to select Contrast and press OK 

  LAP to confirm.
- 4. Press PAGE ≯ to adjust desired contrast.
- 6. Press 511 to exit this menu.

### Language




- 1. In the Settings menu, press PAGE ≯and then press OK LAP to select **General**.
- 2. Press ok LAPto enter **System**.
- 3. Press PAGE ★ to select **Language** and press ok LAP to confirm.
- 4. Press PAGE ≯to select desired language and press

  ok LAP to confirm.
- 5. Press **⇒** □ to exit this menu.

## **Bluetooth**

Before pairing Rider 420 with your bluetooth enabled mobile phone, make sure the bluetooth function of your mobile phone and Rider 420 is turned on.


#### **Enable Bluetooth**

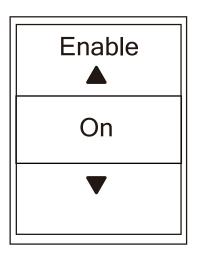

- 1. In the Settings menu, press PAGE ≯and then press OK LAP to select **General**.
- 2. Press PAGE ≯to select **Bluetooth** and press ok LAP to confirm.
- 3. Press PAGE ≯to turn on/off bluetooth.
- 4. Press **⊃**□ to exit this menu.

## **Configure Auto Scroll**

When the feature is enabled, the device will automatically switch pages at the preset time.

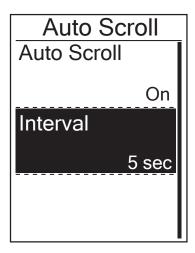


- 1. In the Settings menu, press PAGE **>** and then press ok LAP to select **General**.
- 2. Press PAGE ≯to select **Auto Scroll** and press ok LAP to confirm.
- 3. Press PAGE 

  to select the setting that you want to change and press ok 

  LAP to enter its submenu.
  - Auto scroll: enable/disable the auto switch.
  - Interval: set the interval time.
- 4. Press **⊃II** to exit this menu.

## **Enable File Saving Mode**

When the feature is enabled, the device will automatically overwrite from your oldest records when memory storage is full.

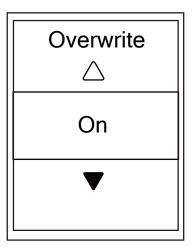


- 1. In the Settings menu, press PAGE ≥ and then press OK LAP to select **General**.
- 2. Press PAGE 

  to select File Saving and press OK LAP to confirm.
- 3. Press PAGE ≥ to select "On" to enable device to overwrite history.
- 4. Press 511 to exit this menu.

## **Start Reminder**


When Rider 420 detects the motion of your bike, it would pop up a reminder to ask you if you would like to record or not. You can set the frequency of start reminder.

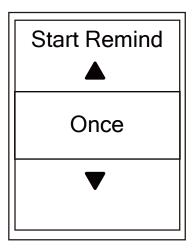

- 2. Press PAGE > to select **Start Remind** and press ok LAP to confirm.
- 3. Press PAGE ≯to select the desired setting and press ok LAP to confirm.
- 4. Press 511 to exit this menu.

## **View Memory Usage**

View the storage status of the device.

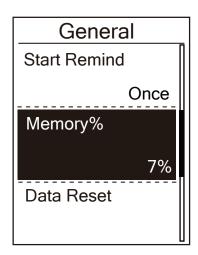


- 2. Press PAGE 

  to select **Memory** and press ok LAP to confirm. The storage status is displayed on the screen.
- 3. Press sum to exit this menu.

### **Reset Data**

You can restore your Rider 420 to factory settings.

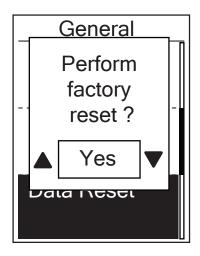

- 3. Press PAGE ≯to select "YES" and press ok LAP to confirm factory reset.
- 4. Press 511 to exit this menu.

**NOTE:** Factory reset operation will restore device to factory default settings. In addition to deleting all the tracks, it will also delete pre-paired sensors but will not remove UUID from the account you added in.

## **View Firmware Version**


You can view your device current firmware version.

- 1. In the Settings menu, presspage ≥ and then press ok LAPto select **General**.
- 2. Press PAGE 

  to select **About** and press OK LAP to confirm. Current firmware version is displayed on the screen.
- 3. Press 511 to exit this menu.

### **ANT+/ BLE Sensors**

Rider 420 is compatible with both ANT+ and BLE sensors. You can customize the respective sensor settings such as rescan the sensor to pair with your device or enable/disable the function.

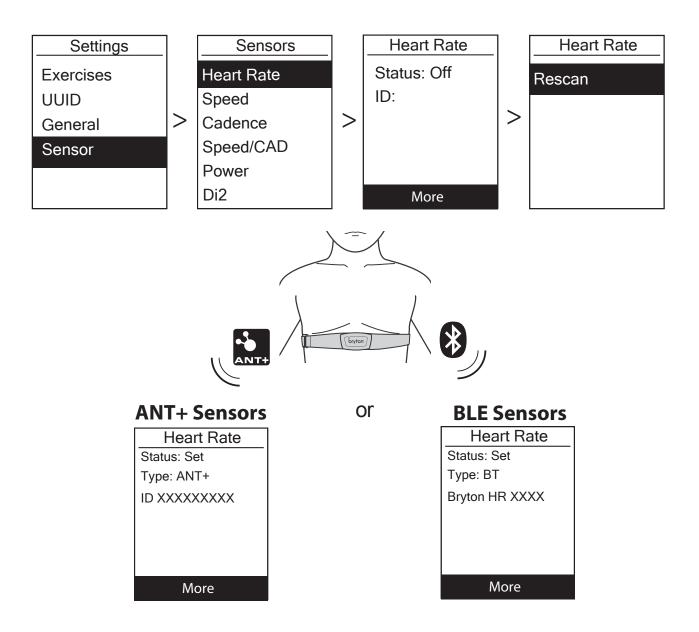

- 1. In the Settings menu, press PAGE ♦ to select **Sensor** and press OK LAP to confirm.
- 2. Press PAGE 

  to select Heart Rate, Speed, Cadence, Speed/CAD or Power Meter and press OK LAP to confirm selection.
- 3. To pair sensors with your device, please have the Bryton Smart sensors installed first, wearing the Heart Rate sensor or rotating the crank and wheel a few times to wake up the Bryton Smart Sensors.
- 4. Press ok ●LAPto enter submenu. Press PAGE > to select desired setting and press ok ●LAPto confirm.
  - **Rescan**: rescan to detect the sensor for pairing with your device.
  - Turn on / Turn off : enable / disable the sensor.
- 5. Press **⊅** □ to exit this menu.

#### NOTE:

- Please refer to page 42-43 for sensors installation.
- While pairing your speed/cadence sensor/the heart rate belt and power meter, please make sure there is no other cadence/speed sensor/power meter within 5m.
- Bryton smart sensors can only be paired when they are awake, or they would go back to sleep to preserve power.
- When the heart rate monitor is paired, the heart rate icon appears on the main screen. When cadence sensor is paired, the cadence sensor icon appears on the main screen.
- After pairing, your Bryton devices automatically connect to Bryton Smart Sensors each time when the sensors are awake.


#### NOTE:

Rider 420 provides 2 bike profiles. Each profile has its respective sensor setting. Simply activate the bike you choose you ride in Bike Profile setting and you are ready to go. Please refer to page 33 to learn how to activate the bike.

## **Altitude**

You can set the altitude setting for the current location and four other locations.

#### **Current Altitude**

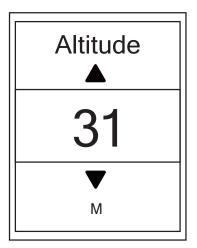


- 1. In the Settings menu, press PAGE ➤ and then press OK LAP to select **Altitude**.
- 2. Press ok Lapto enter Altitude.
- 4. Press **⊃** □ to exit this menu.

**Note:** The value of altitude on the meter mode will be changed once current altitude is adjusted.

**Note:** Current Altitude can also be adjusted via Bryton Active App. Please go to page 36 tollearn how to calibrate altitude.

#### **Other Location Altitude**


With other locations altitude setting, you can save a value of altitude of your planned location, and do calibration once you are in the appointed position.

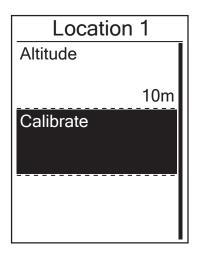

- 1. In the Settings menu, pressPAGE ≼ and then press OK LAP to select **Altitude**.
- 2. Press PAGE ≯to select Location 1, Location 2, Location 3, Location 4 or Location 5 and press ok LAP to enter.
- 3. To set altitude of the location, press OK LAP to enter **Altitude**.
- 5. To calibrate the set altitude, press PAGE ♦ to select **Calibrate** and press OK LAP to confirm.
- 6. Press **⊃**□ to exit this menu.

## **Personalize User Profile**

You can change your personal information.

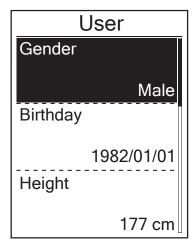

- 2. Press OK LAP to enter **User Profile**. A message of "Input correct profile as it might affect analysis." pops up. Press OK LAP to confirm after reading message.
- 3. Press PAGE 

  to select setting that you want to edit and pressok 


  LAPto enter its submenu.
  - Gender: select your gender.
  - Birthday: set your Birthday
  - Height: set your height.
  - · Weight: set your weight.
  - Max HR: set your maximum heart rate.
  - LTHR: set your lactate threshold heart rate.
  - FTP: set your functional threshold power.
  - MAP: set your maximum aerobic power.
- 4. Press PAGE 

  to select the desired setting and press ok LAP to confirm.
- 5. Press **⇒**□■ to exit this menu.

**NOTE:** Please enter correct personal information since it might affect analysis.

## **Personalize Bike Profile**

You can customize and view your bicycle(s) profile.

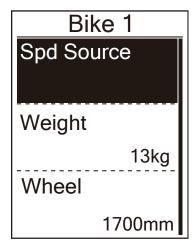


- 2. Press PAGE ≯to select **Bike Profile** and then press OK LAP to enter.
- 3. Press PAGE 

  to select setting that you want to edit and press ok LAP to enter its submenu.
  - Spd Source: set the priority of the speed sources
  - · Weight: set the bike weight.
  - Wheel: set the bike wheel size.
  - · Activate: select to activate the bike.
- 5. Press **→ III** to exit this menu.

NOTE: For details on wheel size, see "Wheel Size and Circumference" on page 44.

#### **View Bike Profile**

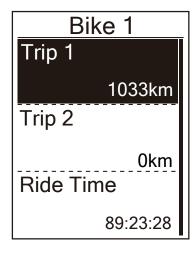

- 1. In the Settings menu, press PAGE ➤ and then press oκ LAP to select **Profile**.
- 2. Press PAGE 

  to select Bike Profile and then press ok LAP to enter.
- 4. Press PAGE 

  to select your desired bike and pressok LAP to confirm.
- 5. Press PAGE ➤ to view more data of the selected bike.
- 6. Press **→ III** to exit this menu.

### **Adjust Odometer**




- 4. Presspage ≯to select **Bike 1+2** and pressok Lapto confirm.
- 5. Press OK LAP enter into ODO setting page.
- 6. Press PAGE 

  to adjust ODO and press OK LAP to confirm.
- 7. Press **→ III** to exit this menu.

**NOTE:** To get to the number faster, you can long press  $\triangle$  /  $\nabla$  .

#### **Reset ODO**

You can reset the distance of Trip 1, Trip 2 and odometer.

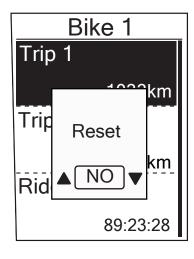

- 1. In the Settings menu, press PAGE ≯and then press ok ●LAP to select **Profile**.
- 2. Press PAGE ➤ to select **Bike Profile** and then press OK LAP to enter

- 5. Press PAGE 

  to select trip 1 or trip 2 and press OK LAP to confirm. If you select Bike 1+2, please select ODO.
- 6. A message "Reset" pops up on the device. Press PAGE 

  \*\* to select "YES" and press ok LAP to confirm or press PAGE 

  \*\* to set ODO to the desired number.
- 7. Press 511 to exit this menu.

**NOTE:** Trip 1, Trip 2 means cumulative mileage recorded before you reset it. They are 2 separate distance measurements. You are free to use Trip 1 or Trip 2 to record, for example, weekly total distance and use another to record, for example, monthly total distance.

# **Bryton Active App Advanced Settings**

After pairing your Rider 420 with Bryton Active App, you will have access to Grid Setting, Altitude Calibration and Notifications.

## **Grid Setting**

You can customize your data page manually, turn on/off Smart Pause and set Data Recording.

- 1. Pair Rider 420 with Bryton Active App
  - a. Go to Settings > General > Bluetooth to turn on Bluetooth on Rider 420.
  - b. Go to your phone "Settings>Bluetooth" and enable Bluetooth.
  - c. Go to Bryton Mobile App and tap "Settings>Device Manager>+".
  - d. Select and add your device by pressing "+".
  - e. Tap "Pair" to pair your device with your phone. (For iOS phone only)
  - f. Tap "Finish" to complete pairing.
- 2. Customize Your Data Page
  - a. Tap "Settings > Grid Setting" in Bryton Active App
  - b. Turn on your prefered pages and enter the page.
  - d. Tap < or > to change the number of grids.
  - e. Tap data grid to change ride data.

## **Altitude Calibration**

With connection to Internet, Bryton Active App provides altitude information for you to calibrate directly. You can also change altitude manually.

- 1. Pair Rider 420 with Bryton Active App
  - a. Go to Settings > General > Bluetooth to turn on Bluetooth on Rider 420.
  - b. Go to your phone "Settings>Bluetooth" and enable Bluetooth.
  - c. Go to Bryton Mobile App and tap "Settings>Device Manager>+".
  - d. Select and add your device by pressing "+".
  - e. Tap "Pair" to pair your device with your phone. (For iOS phone only)
  - f. Tap "Finish" to complete pairing.
- 2. Calibrate Your Altitude
  - a. Tap "Alt. Cal" in Bryton Active App.
  - b. Bryton Active App shows altitude of your current location. you can also make manual changes by pressing ▲ ▼ or tap on the number to input manually.
  - d. Tap "Calibrate" to make change as suggested.
  - e. Tap "OK" to calibrate altitude data for your device.

## **Notifications**

After pairing your compatible smartphone using Bluetooth Smart wirelessly technology with Rider 420, you can receive phone call, text and email notifications on your Rider 420.

#### 1. IOS Phone Pairing

- a. Go to Settings > General > Bluetooth to turn on Bluetooth on Rider 420.
- b. Go to your phone "Settings>Bluetooth" and enable Bluetooth.
- c. Go to Bryton Mobile App and tap "Settings>Device Manager>+".
- d. Select and add your device by pressing "+".
- e. Tap "Pair" to pair your device with your phone. (For iOS phone only)
- f. Tap "Finish" to complete pairing.

#### NOTE:

• If notifications don't work, please go to your phone "Settings>Notifications" and check if you have allowed notifications in compatible messages and email apps or go to social applications and check if you have turned on notifications in your application settings.

#### 1. Android Phone Pairing

- a. Go to Settings > General > Bluetooth to turn on Bluetooth on Rider 420.
- b. Go to your phone "Settings>Bluetooth" and enable Bluetooth.
- c. Go to Bryton Mobile App and tap "Settings>Device Manager>+".
- e. Select and add your device by pressing "+".
- f. Tap "Finish" to complete pairing.

#### 2. Allow Notification Access

- a. Tap "Settings>Notification".
- b. Tap "OK" to enter setting to allow Notification Access for Bryton app.
- c. Tap "Active" and select "OK" to allow notification access for Bryton.
- d. Go back to Notification settings.
- e. Select and enable In-coming Calls, Text Messages and Emails by tapping each item.

# **Appendix**

# **Specifications**

## Rider 420

Item	Description
Display	2.3" FSTN positive transflective dot-matrix LCD
Physical Size	49.9 X 83.9 X 16.9mm
Weight	77g
Operating Temperature	-10°C ~ 60°C
Battery Charging Temperature	0°C ~ 40°C
Battery	Li polymer rechargeable battery
Battery Life	35 hours with open sky
ANT+™	Featuring certified wireless ANT+™ connectivity. Visit www.thisisant.com/directory for compatible products.
GNSS	Integrated high-sensitivity GNSS receiver with embedded antenna
BLE Smart Water Resistant	Bluetooth smart wireless technology with embedded antenna; 2.4GHz band 0dBm
Barometer	Equipped with barometer

## **Smart Speed Sensors**

Item	Description
Physical size	36.9 x 34.8 x 8.1 mm
Weight	6 g
Water Resistance	Incidental exposure to water of up to 1 meter for up to 30 minutes.
Transmission range	3 m
Battery life	Up to 1 year
Operating temperature	-10°C ~ 60°C
Radio frequency/protocol	2.4GHz / Bluetooth 4.0 and Dynastream ANT+ Sport wireless communications protocol

#### NOTE:

Accuracy may be degraded by poor sensor contact, electrical, magnectic interference and distance from the transmitter.

To avoid magnetic interference, it is recommended that you change location, clean or replace chain.

### **Smart Cadence Sensor**

Item	Description
Physical size	36.9 x 31.6 x 8.1 mm
Weight	6 g
Water Resistance	Incidental exposure to water of up to 1 meter for up to 30 minutes.
Transmission range	3 m
Battery life	Up to 1 year
Operating temperature	-10°C ~ 60°C
Radio frequency/protocol	2.4GHz / Bluetooth 4.0 and Dynastream ANT+ Sport wireless communications protocol

#### NOTE:

Accuracy may be degraded by poor sensor contact, electrical, magnectic interference and distance from the transmitter.

## **Smart Heart Rate Monitor**

ltem	Description
Physical size	63 x 34.3 x 15 mm
Weight	14.5 g (sensor) / 31.5g (strap)
Water Resistance	Incidental exposure to water of up to 1 meter for up to 30 minutes.
Transmission range	3 m
Battery life	Up to 2 years
Operating temperature	0°C ~ 50°C
Radio frequency/protocol	2.4GHz / Bluetooth 4.0 and Dynastream ANT+ Sport wireless communications protocol


#### NOTE:


Accuracy may be degraded by poor sensor contact, electrical, magnectic interference and distance from the transmitter.

# **Battery Information Smart Speed Sensor and Smart Cadence Sensor**

Both sensors contain a user-replaceable CR2032 battery. Before using sensors:

- 1. Locate the circular battery cover on the back of sensors.
- 2. Use your finger to press and twist cover counter-clockwise so the indicator on the cover points to unlock icon ( ).
- 3. Remove the cover and battery tab.

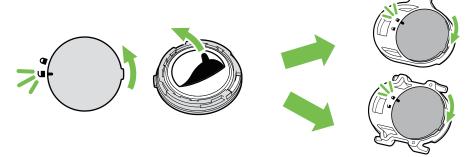

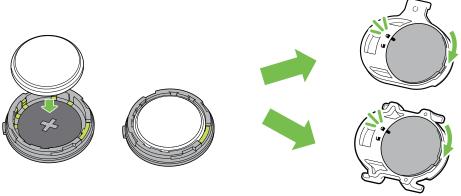

To replace the battery:

- 1. Locate the circular battery cover on the back of sensors.
- 2. Use your finger to press and twist cover counter-clockwise so the indicator on the cover points to unlock icon ( $\mathbf{\subseteq}$ ).
- 3. Remove the battery and insert new battery with positive connector first into the battery chamber.
- 4. Use your finger to press and twist cover clockwise so the indicator on the cover points to locked icon (♠).

#### NOTE:


- When installing a new battery, if the battery is not placed with the positive connector first, the positive connector will easily deform and malfucntion.
- Be careful not to damage or lose the O-ring gasket on the cover.
- Contact your local waste disposal department to properly dispose of used batteries.

### **Smart Heart Rate Monitor**

The heart rate monitor contains a user-replaceable CR2032 battery.

To replace the battery:

- 1. Locate the circular battery cover on the back of the heart rate monitor.
- 2. Use a coin to twist the cover counter-clockwise.
- 3. Remove the cover and battery.
- 4. Insert the new battery, with the positive connector facing upward and lightly press it.
- 5. Use a coin to twist the cover clockwise.

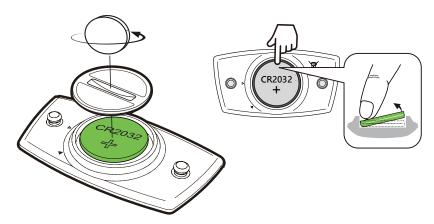


#### **NOTE:**


- Be careful not to damage or lose the O-ring gasket.
- Contact your local waste disposal department to properly dispose of used batteries.

## **Install Rider 420**


## **Use Bike Mount to Mount Rider 420**

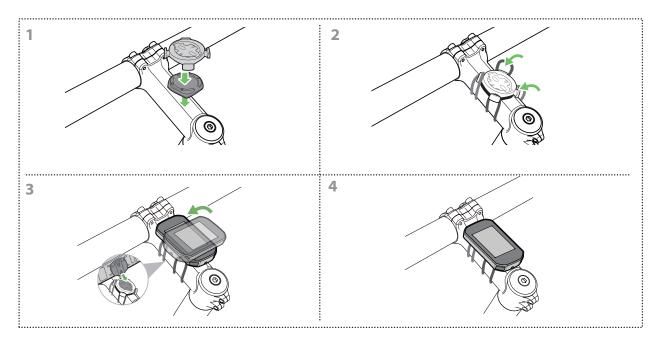

#### (Optional)

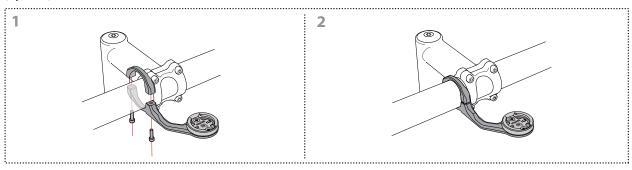


# Install Speed/Cadence/Dual Sensor (Optional)

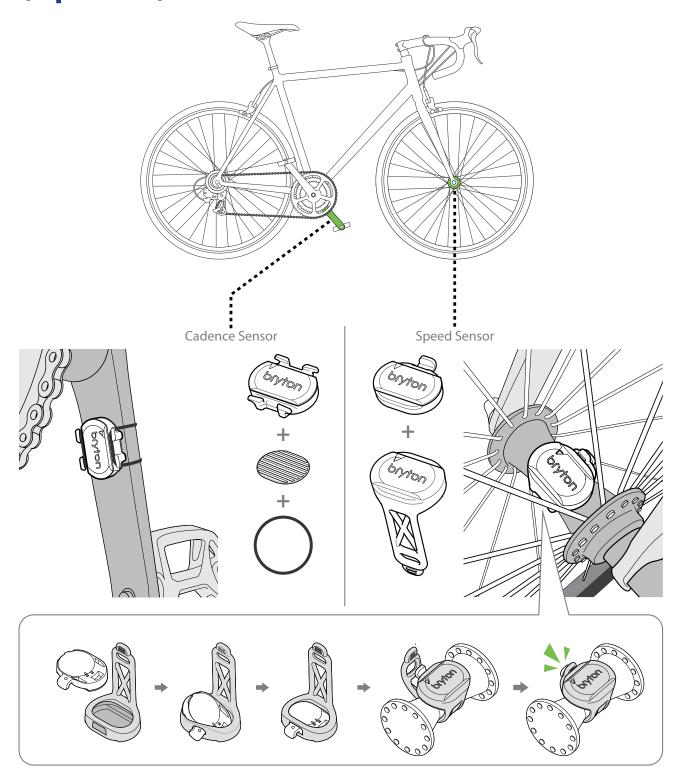

#### NOTE:

• Once sensors waken, the LED blinks twice. The LED continues to blink when you continue to pedal for pairing. After around 15 blinks, it will stop blinking. If not used for 10 minutes, sensor would go into sleep mode to preserve power. Please complete the pairing during the time the sensor is awake.

## **Install Heart Rate Belt (Optional)**

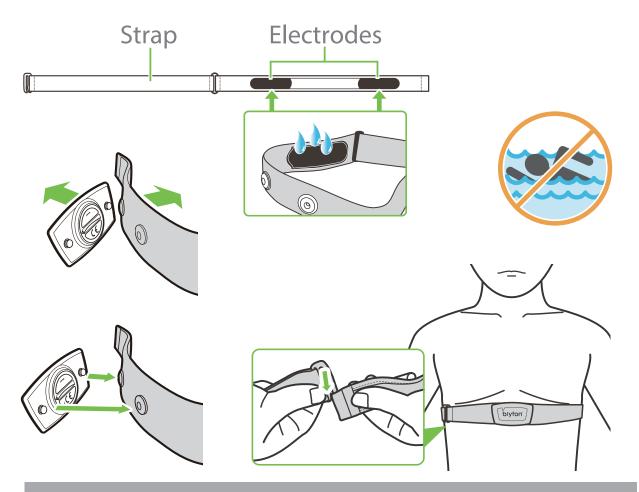

#### **NOTE:**

- In cold weather, wear appropriate clothing to keep the heart rate belt warm.
- The belt should be worn directly on your body.
- Adjust the sensor position to the middle part of the body (wear it slightly below the chest). The Bryton logo shown on the sensor should be facing upward. Tighten the elastic belt firmly so that it will not turn loose during the exercise.
- If the sensor cannot be detected or the reading is abnormal, please warm up for about 5 minutes.
- If the heart rate belt is not used for a period of time, remove the sensor from the heart rate belt.

**NOTE:** Improper battery replacement may cause an explosion. When replacing a new battery, use only the original battery or a similar type of battery specified by the manufacturer. Disposal of the used batteries must be carried out in accordance to the regulations of your local authority.



For better environmental protection, waste batteries should be collected separately for recycling or special disposal.

# **Wheel Size and Circumference**

The wheel size is marked on both sides of the tires.

Wheel Size	L(mm)
12x1.75	935
12x1.95	940
14x1.50	1020
14x1.75	1055
16x1.50	1185
16x1.75	1195
16x2.00	1245
16x1-1/8	1290
16x1-3/8	1300
17x1-1/4	1340
18x1.50	1340
18x1.75	1350
20x1.25	1450
20x1.35	1460
20x1.50	1490
20x1.75	1515
20x1.95	1565
20x1-1/8	1545
20x1-3/8	1615
22x1-3/8	1770
22x1-1/2	1785
24x1.75	1890
24x2.00	1925
24x2.125	1965
24x1(520)	1753
24x3/4 Tubular	1785
24x1-1/8	1795
24x1-1/4	1905
26x1(559)	1913
26x1.25	1950
26x1.40	2005
26x1.50	2010
26x1.75	2023
26x1.95	2050
26x2.10	2068
26x2.125	2070
26x2.35	2083

Wheel Size	L(mm)
26x3.00	2170
26x1-1/8	1970
26x1-3/8	2068
26x1-1/2	2100
650C Tubular 26x7/8	1920
650x20C	1938
650x23C	1944
650x25C 26x1(571)	1952
650x38A	2125
650x38B	2105
27x1(630)	2145
27x1-1/8	2155
27x1-1/4	2161
27x1-3/8	2169
27.5x1.50	2079
27.5x2.1	2148
27.5x2.25	2182
700x18C	2070
700x19C	2080
700x20C	2086
700x23C	2096
700x25C	2105
700x28C	2136
700x30C	2146
700x32C	2155
700C Tubular	2130
700x35C	2168
700x38C	2180
700x40C	2200
700x42C	2224
700x44C	2235
700x45C	2242
700x47C	2268
29x2.1	2288
29x2.2	2298
29x2.3	2326

## **Basic Care For Your Rider 420**

Taking good care of your device will reduce the risk of damage to your device.

- Do not drop your device or subject it to severe shock.
- Do not expose your device to extreme temperatures and excessive moisture.
- The screen surface can easily be scratched. Use the non-adhesive generic screen protectors to help protect the screen from minor scratches.
- Use diluted neutral detergent on a soft cloth to clean your device.
- Do not attempt to disassemble, repair, or make any modifications to your device. Any attempt to do so will make the warranty invalid.

# **Data Fields**

Category	Data Fields	Description of Data Fields
Energy	Calorie	The number of total calories burned.
Energy	Kilojoules	The accumulated power output in kilojoules for the current activity.
Altitude	Altitude	The height of your current location above or below sea level.
	Max Altitude	The highest height of your current location above or below sea level which the rider achieved for the current activity.
	Alt. Gain	The total altitude distance gained during this current activity.
	Alt. Loss	The total altitude lost during this current activity.
	Gradient	The calculation of altitude over distance.
	Uphill	The total distance traveled while ascending.
	Downhill	The total distance traveled while descending.
	Distance	The distance travelled for current activity.
	Odometer	The accumulated total distance until you reset it.
	LapDistance	The distance traveled for the current lap.
Distance	LLapDist.	The distance traveled for the last finished lap.
Biotalioc	Trip 1/Trip 2	Cumulative mileage recorded before you reset it. They are 2 separate trip measurements. You are free to use Trip 1 or Trip 2 to record, for example, weekly total distance and use another to record, for example, monthly total distance.
	Speed	The current rate of change in distance.
	Avg Speed	The average speed for current activity.
Speed	Max Speed	The maximum speed for current activity.
	LapAvgSpd	The average speed for the current lap.
	LapMaxSpd	The maximum speed for the current lap.
	LLapAvgSpd	The average speed for the last finished lap.
	Time	Current GPS Time.
	Ride Time	The time spent on riding for current activity.
	Trip Time	Total time spent for current activity.
1		Total time spent for current activity.
Time	Sunrise	The time of sunrise based on your GPS location.
Time	•	·
Time	Sunrise	The time of sunrise based on your GPS location.
Time	Sunrise Sunset	The time of sunrise based on your GPS location.  The time of sunset based on your GPS location.  The stopwatch time for the current lap.  The stopwatch time for the last finished lap.
Time	Sunrise Sunset LapTime	The time of sunrise based on your GPS location.  The time of sunset based on your GPS location.  The stopwatch time for the current lap.
Time	Sunrise Sunset LapTime LLapTime	The time of sunrise based on your GPS location.  The time of sunset based on your GPS location.  The stopwatch time for the current lap.  The stopwatch time for the last finished lap.
	Sunrise Sunset LapTime LLapTime Lap Count	The time of sunrise based on your GPS location.  The time of sunset based on your GPS location.  The stopwatch time for the current lap.  The stopwatch time for the last finished lap.  The number of laps finished for the current activity.
Time	Sunrise Sunset LapTime LLapTime Lap Count Cadence	The time of sunrise based on your GPS location.  The time of sunset based on your GPS location.  The stopwatch time for the current lap.  The stopwatch time for the last finished lap.  The number of laps finished for the current activity.  The current rate at which rider is pedalling the pedals
	Sunrise Sunset LapTime LLapTime Lap Count Cadence Avg CAD	The time of sunrise based on your GPS location.  The time of sunset based on your GPS location.  The stopwatch time for the current lap.  The stopwatch time for the last finished lap.  The number of laps finished for the current activity.  The current rate at which rider is pedalling the pedals  The average cadence for current activity.

Category	Data Fields	Description of Data Fields
HR	Heart Rate	The number of times your heart beats per minute. It requires compatible HR sensor pairing connection to your device.
	Avg HR	The average heart rate for current activity.
	Max HR	The maximum heart rate for current activity.
	MHR %	Your current heart rate divided by Maximum Heart Rate. MHR means that the maximum number of beats made by your heart in 1 minute of effort. (MHR is different from Max HR. You will need to set MHR in User Profile)
	LTHR%	Your current heart rate divided by Lactate Threshold Heart Rate. LTHR means that the average heart rate while in the intense exercise at which the blood concentration of lactate begins to exponentially increase. (You will need to set LTHR in User Profile)
	MHR Zone	The current range of your Maximum Heart Rate Pecentage heart rate (Zone 1 to Zone 75).
	LTHR Zone	The current range of your Lactate Threshold Heart Rate Percentage (Zone 1 to Zone 7).
	LapAvgHR	The average heart rate for the current lap.
	LLapAvgHR	The average heart rate for the last finished lap.
	Lap MHR%	The average of MHR% for the current lap.
	Lap LTHR%	The average of LTHR% for the current lap.
Temp	Temp.	The current temperature.
	Power	Current Power in Watt.
	Avg Power	The average power for the current activity.
	Max Power	The maximum power for the current activity.
	LapAvgPw	The average power for the current lap.
	LapMaxPw	The maximum power for the current lap.
	3s power	3 seconds average of power
	10s power	10 seconds average of power
	30s power	30 seconds average of power
Power	NP (Normalized Power)	An estimate of the power that you could have maintained for the same physiological "cost" if your power had been perfectly constant, such as on an ergometer, instead of variable power output.
	TSS (Training Stress Score)	Training Stress Score is calculated by taking into account both the intensity such as IF and the duration of the ride. A way of measuring how much stress is put on the body from a ride.
	IF (Intensity Factor)	Intensity Factor is the ratio of the normalized power(NP) to your Functional Threshold Power(FTP). An indication of how hard or difficult a ride was in relation to your overall fitness.
	SP (Specific Power)	Power-to-weight ratio
	FTP Zone	The current range of your Functional Threshold Power Percentage (Zone1 to Zone 7).

Category	Data Fields	Description of Data Fields
	MAP Zone	The current range of your Maximum Aerobic Power Pecentage
	N/A D0/	(Zone 1 to Zone 7).
	MAP%	The current power divided by your Maximum Aerobic Power.
1	I on ND	The current power divided by your functional threshold power.
1	Lap NP	Normalized power of the current lap
-	Last Lap NP	Normalized power of the last lap
	LlapAvgPw	The average power output for the last finished lap.  The maximum power for the last finished lap.
Power	LlapMaxPw	
	Left Power	Current left leg power
I	Right Power	Current right leg power
	3s Left Power	3 seconds average of left leg power
	10s Left Power	10 seconds average of left leg power
	30s Left Power	30 seconds average of left leg power
	3s Right Power	3 seconds average of right leg power
	10s Right Power	10 seconds average of right leg power
	30s Right Power	30 seconds average of right leg power
	3s Avg PB	3 seconds average power balance.
	CurPB-LR	The current left/right power balance.
	AvgPB-LR	The average left/right power balance for the current activity.
	CurTE-LR	The current left/right percentage of how efficiently a rider is pedaling.
	MaxTE-LR	The maximum left/right percentage of how efficiently a rider is pedaling.
	AvgTE-LR	The average left/right percentage of how efficiently a rider is pedaling.
	CurPS-LR	The current left/right percentage of how evenly a rider is applying force to the pedals throughout each pedal stroke.
Pedal	MaxPS-LR	The maximum left/right percentage of how evenly a rider is applying force to the pedals throughout each pedal stroke.
Analysis	AvgPS-LR	The average left/right percentage of how evenly a rider is applying force to the pedals throughout each pedal stroke.
	Dist to POI	Distance to next point of interest.
DOI.	Ascent to POI	Ascent to next point of interest.
POI	Dist to Peak	Distance to next peak.
l L		

#### RF Exposure Information (MPE)

This device meets the EU requirements and the International Commission on Non-Ionizing Radiation Protection (ICNIRP) on the limitation of exposure of the general public to electromagnetic fields by way of health protection. To comply with the RF exposure requirements, this equipment must be operated in a minimum of 20 cm separation distance to the user.

Hereby, Bryton Inc. declares that the radio equipment type Bryton product is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

http://www.brytonsport.com/download/Docs/CeDocs\_Rider420.pdf



Designed by Bryton Inc.
Copyright © 2018 Bryton Inc. All rights reserved.
7F, No.75, Zhouzi St., Neihu Dist., Taipei City 114, Taiwan (R.O.C.)